


- Use only the uppermost bleed screw(s) to bleed air from the caliper.
- •DO NOT use the lower bleed screw(s). Doing so may introduce air into the system.
- •If calipers are mounted horizontally they must be dismounted and rotated so the bleed screw(s) is above the bores.

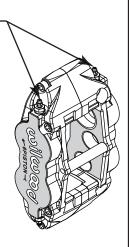

- www.wilwood.com
- E-mail Additional Assistance: info@wilwood.com

DS-923B Rev Date: 07-20-16